

#### Selection and ordering data

The gearbox is lubricated for its entire service life in such a way that it can be installed and operated using all the mounting types / mounting positions listed below.

Please contact customer service to discuss the oil quantity if you wish to use a mounting position which is not shown here.

#### Worm gearbox S, flange-mounted design, and with housing flange

##### Oil control valves:

These types are lubricated for life.

No ventilation, oil level, or drain plugs are present.

1) ... 4) Position of the terminal box, see Chapter 8.

S: B3-00 (IM B3-00) <sup>1)</sup>


Order code: output side A **D06**, output side B **D08**

SF: B5-01 (IM B5-01) <sup>1)</sup>

Order code: output side A **D22**, output side B **D24**

SAD, SAF, SAZ: H-01 <sup>1)</sup>

Order code: output side A **D76**, output side B **D77**

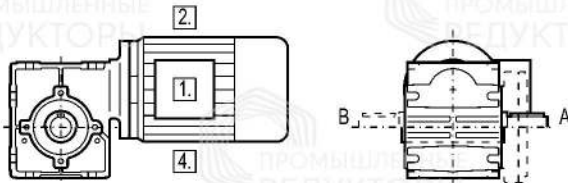

1) Standard mounting type

S: B8-00 (IM B8-00)


Order code: output side A **D68**, output side B **D70**

SF: B5-03 (IM B5-03)

Order code: output side A **D32**, output side B **D34**

SAD, SAF, SAZ: H-02

Order code: output side A **D78**, output side B **D79**

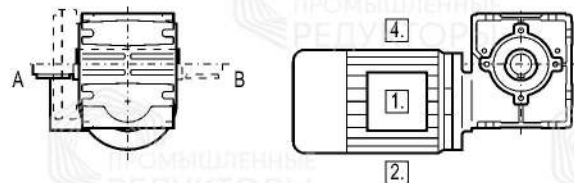

S: B6-00 (IM B6-00)


Order code: output side A **D38**, output side B **D40**

SF: B5-00 (IM B5-00)

Order code: output side A **D18**, output side B **D20**

SAD, SAF, SAZ: H-04

Order code: output side A **D82**, output side B **D83**

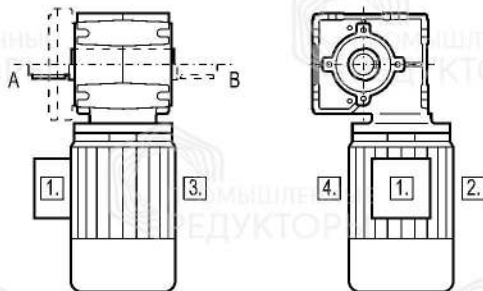

S: B7-00 (IM B7-00)


Order code: output side A **D59**, output side B **D61**

SF: B5-02 (IM B5-02)

Order code: output side A **D27**, output side B **D29**

SAD, SAF, SAZ: H-03

Order code: output side A **D80**, output side B **D81**

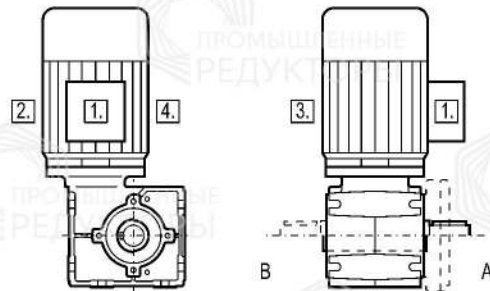

S: V5-00 (IM V5-00)


Order code: output side A **E03**, output side B **E05**

SF: V1-00 (IM V1-00)

Order code: output side A **D90**, output side B **D92**

SAD, SAF, SAZ: H-05

Order code: output side A **D84**, output side B **D85**

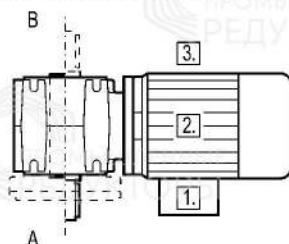

S: V6-00 (IM V6-00)

Order code: output side A **E15**, output side B **E17**

SF: V3-00 (IM V3-00)

Order code: output side A **D98**, output side B **E00**

SAD, SAF, SAZ: H-06

Order code: output side A **D86**, output side B **D87**

